

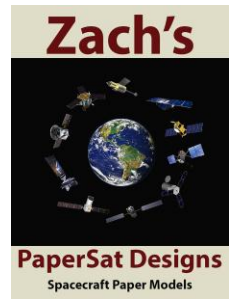
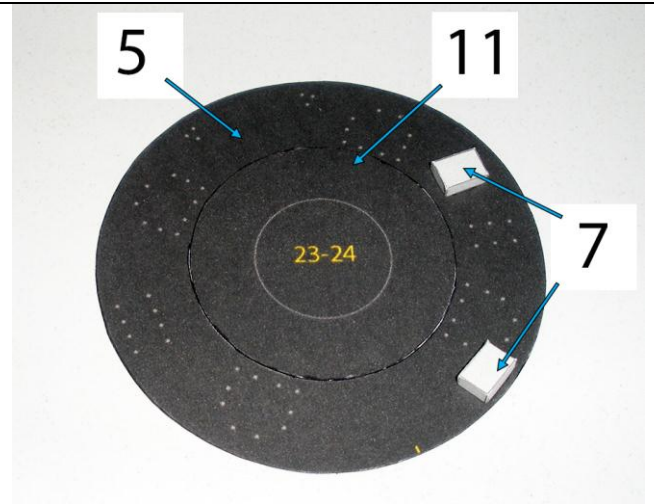



Explorer 10

1/10 Scale Paper Model Instructions

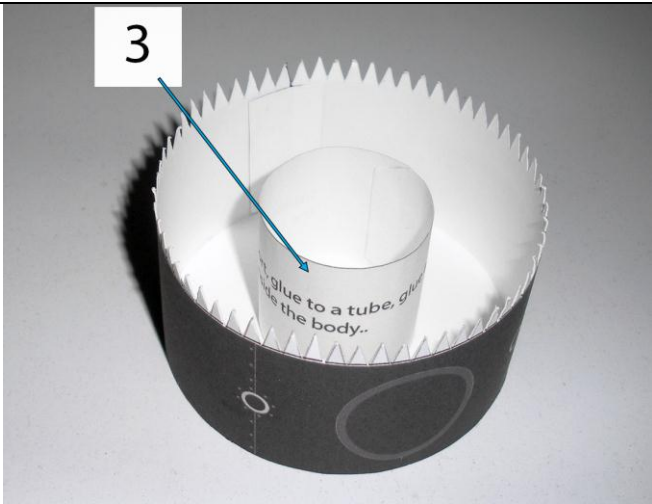

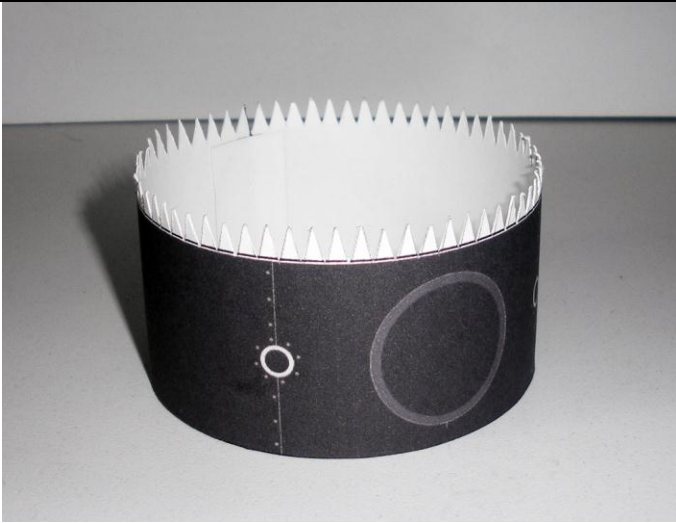



Glue part 11 to cardstock, then onto the Top as shown.

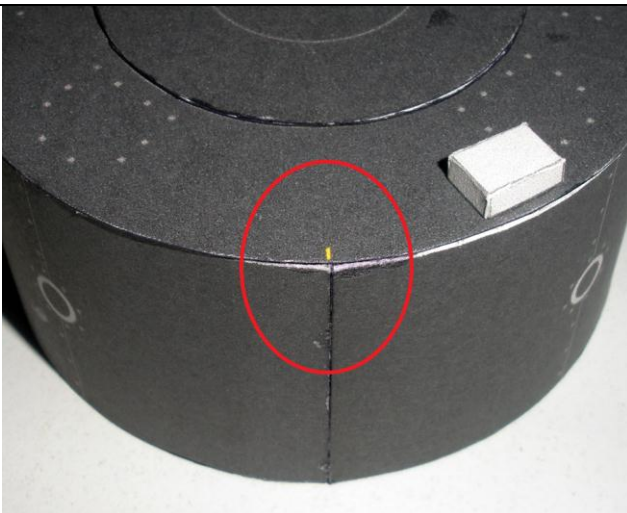

Match the yellow marker on 5 (TOP) to the seem on the body.





Match the yellow marker on 6 (BOTTOM) to the seem on the body.

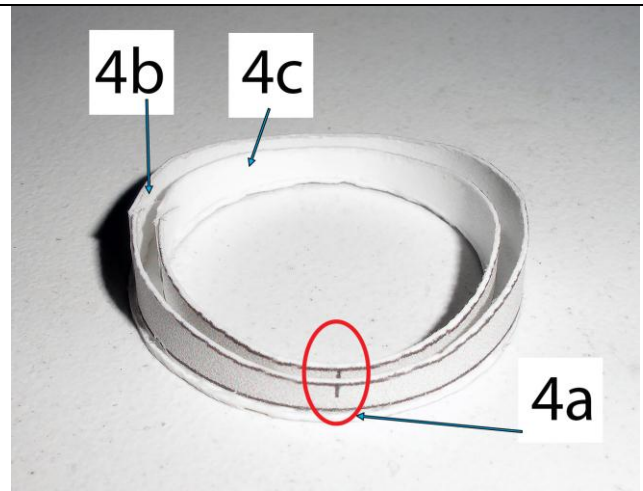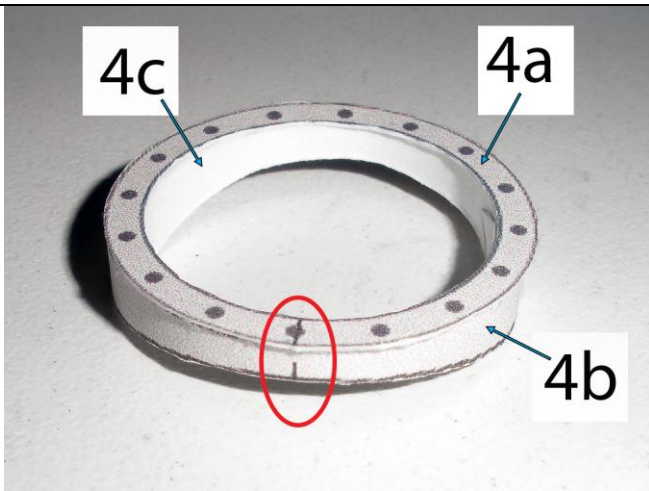


Frontside...
Match marker on 4b to the marker on 4a. 4b is glued to the outer edge on 4a. 4c is glued to the inner edge of 4a.


Backside...
Match the markers on 4b and 4c together.

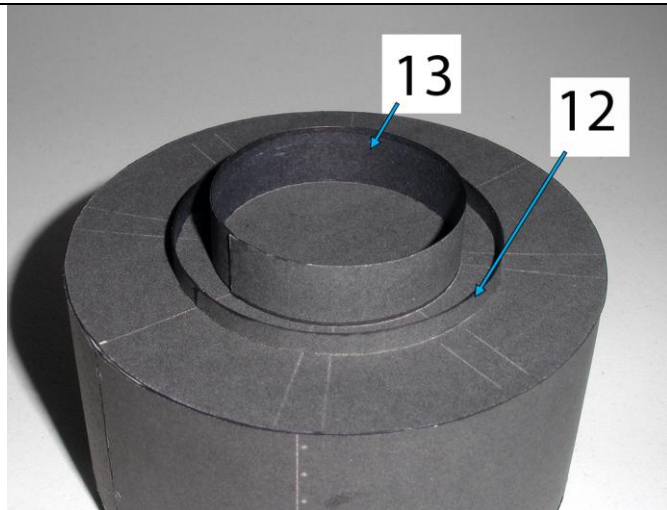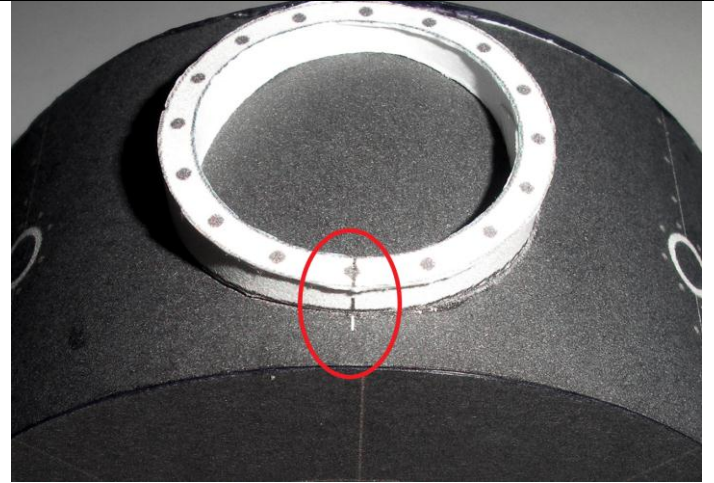



Glue these to the bottom.

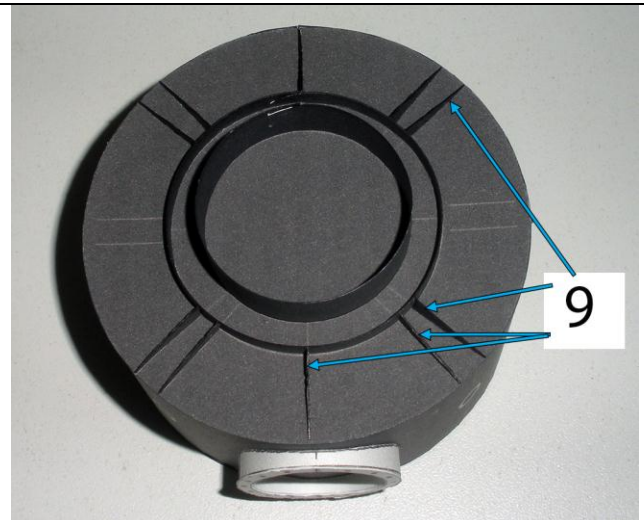



Glue 9 to the ten long lines on the bottom as shown. Pointed end is towards the outer edge.

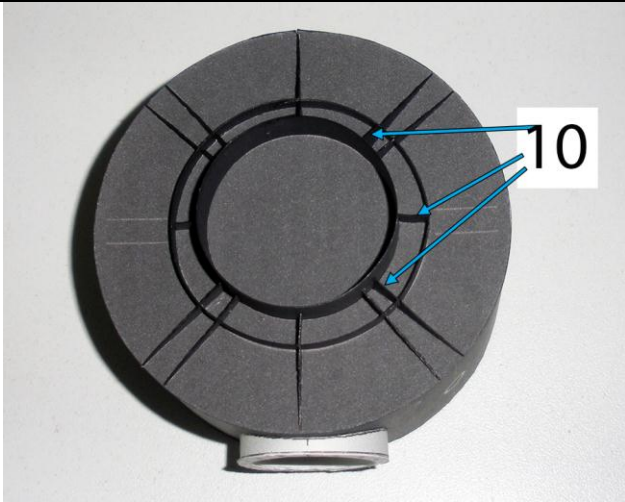


Glue 10 along with parts 9 between the two rings as shown.

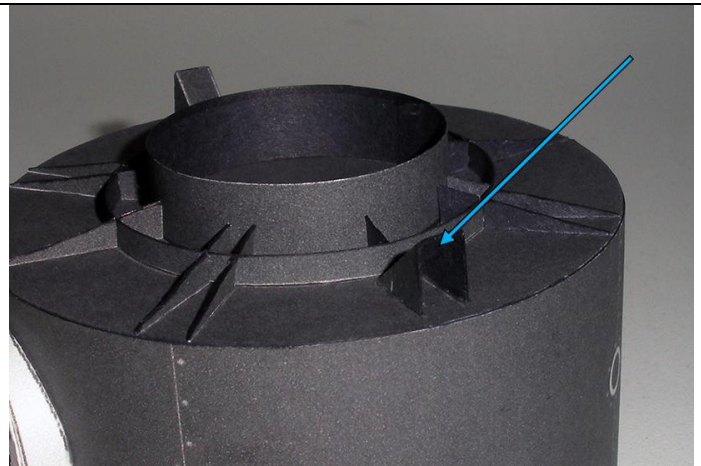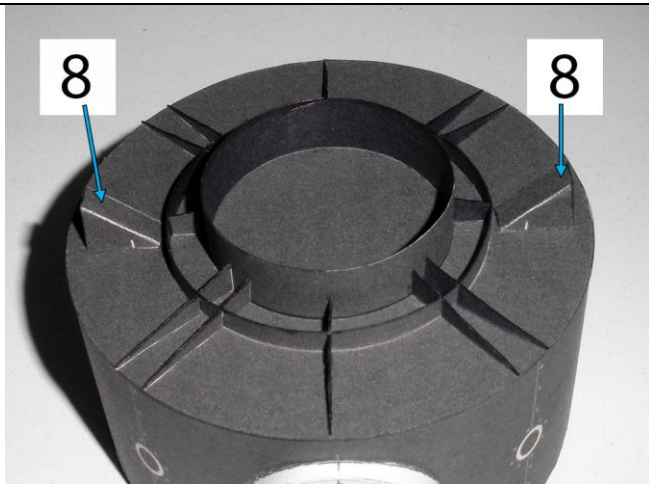


Glue the edge with the grey line on parts 8 to the bottom.

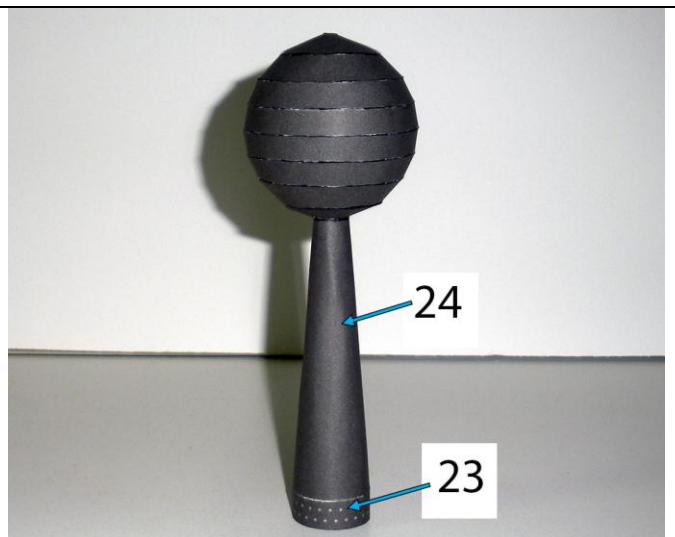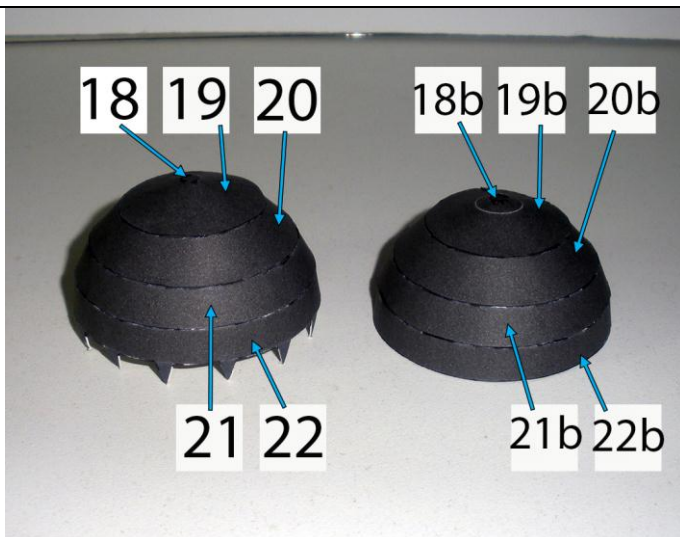


Glue the side of the ball with the grey circle (19b) and the top of 24 together.

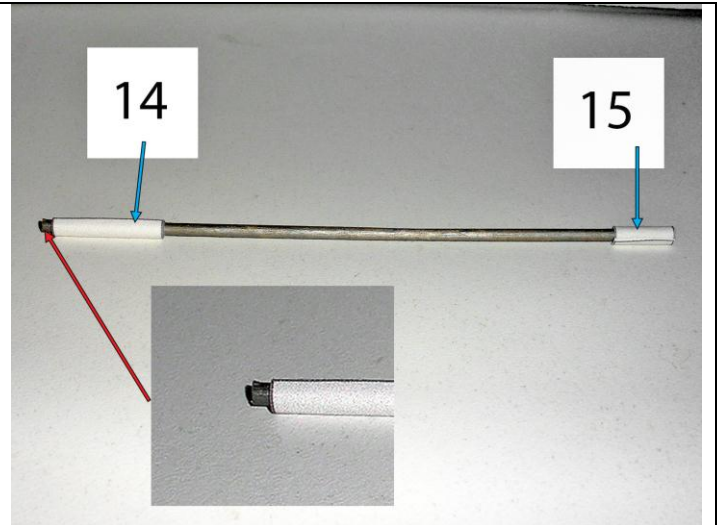


Glue 14 and 15 onto a skewer around 2 mm diameter cut at the same length as the line on the parts sheet. The end of the skewer should extend around ¼ inch (4 mm) from part 14 as shown. Make 4 of these.

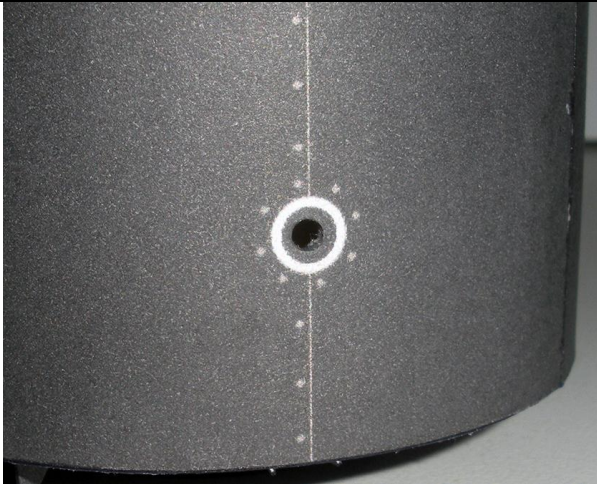


Punch in holes at the center of the 4 rings on the body. The holes should be small enough so that the antennas should be snugly into the holes. This holds the antennas onto the body.

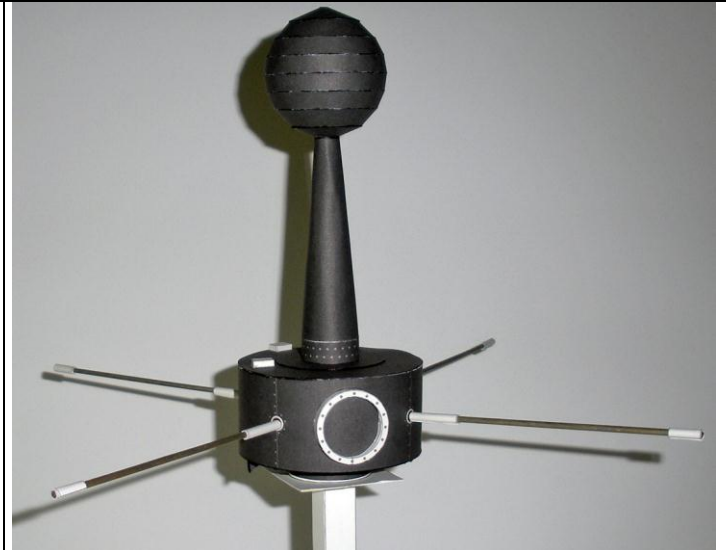

Add glue into the holes and insert the end that sticks out from part 14 into the hole as let the glue dry.

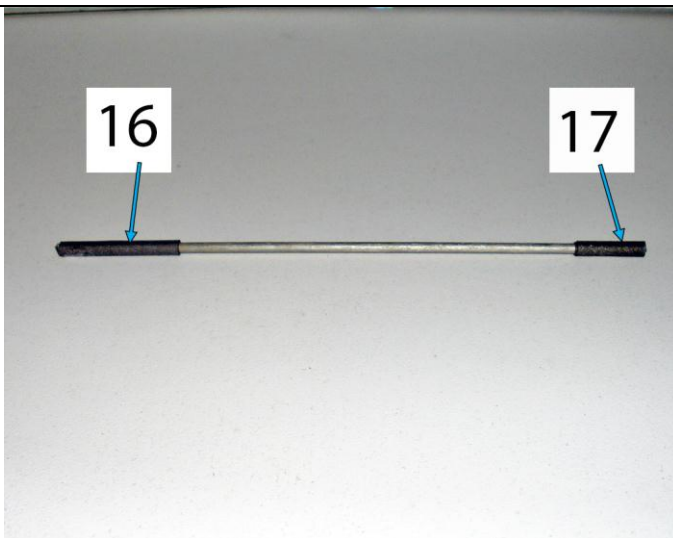

Parts 16 and 17 is at the ends of the rod, make two of these according to the instructions on the parts sheet.

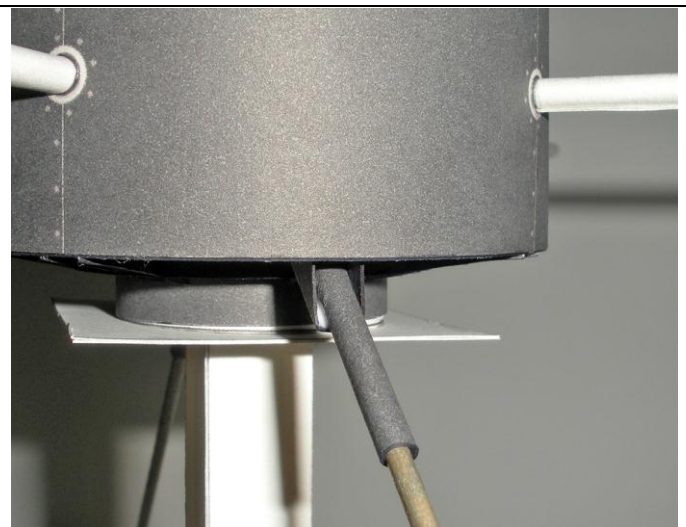

Add glue into parts 8 on the bottom, insert the end with part 16 (larger black strip) as shown and let dry. Your model is done.

